

Midicake ARP - Case Replacement Instructions

- 1) Unplug the USB power and other cables.
- 2) Remove the 5 knobs by gently pulling them upwards.
- 3) Remove the 4 screws from the top case with an M2 (2mm) Allen key or T-10 Torx screwdriver.
- 4) Gently lift the top case off the device.
- 5) Take the new top case and clean any dust off the underside of the screen window.
- 6) Carefully place the new top case onto the device and secure it with the 4 screws.
- 7) Replace the 5 knobs (check the orientation of the indent before pushing down).
- 8) Power up the device and check that everything is functioning correctly.

If you have any issues or questions, please email hello@midicake.com

Midicake ARP - Case Replacement Instructions

- 9) Unplug the USB power and other cables.
- 10) Remove the 5 knobs by gently pulling them upwards.
- 11) Remove the 4 screws from the top case with an M2 (2mm) Allen key or T-10 Torx screwdriver.
- 12) Gently lift the top case off the device.
- 13) Take the new top case and clean any dust off the underside of the screen window.
- 14) Carefully place the new top case onto the device and secure it with the 4 screws.
- 15) Replace the 5 knobs (check the orientation of the indent before pushing down).
- 16) Power up the device and check that everything is functioning correctly.

If you have any issues or questions, please email hello@midicake.com